# **Matrox Rack Mounting Kit - Release Note**

F20254-401-0150 2023.11.10



These release notes contain important information about your Matrox product. These notes are available in English only. We apologize for any inconvenience this may cause.

#### Rack mount kit

### **Hardware supplied**

A rack mount kit for your Matrox product includes:

- Mounting shelf (19 in / 48.26 cm)
- Head screws (4× 10-32, 4× 12-24)
- Flat-head screws (6× 6 mm M3)


## **Mounting guidelines**

To prevent damage to your Matrox hardware, read the following guidelines before mounting your Matrox hardware:

- To install your mounting shelf, fasten it to the rack as per your rack's instructions. Head screws compatible with most rack mounts are provided.
- Use a hand screwdriver to carefully tighten each screw. Make sure not to overtighten the screws.
- Don't stack anything directly over the device.
- Make sure the cables connected to your device are properly secured and that no tension is applied to them.
- Make sure the ambient temperature doesn't exceed the maximum recommended temperatures. For more information, see the "Product information" section of your user guide.

Once your device is mounted, you can connect your system, monitors, and devices to your Matrox device.

## **Mounting your Matrox devices**

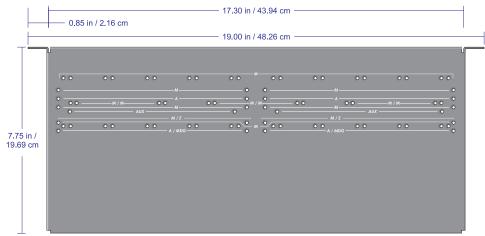

Mounting shelf - Underside



Mounting shelf - Front

To mount your device, use the following guidelines:

	Mounting holes	
Product	Label	Distance from the front edge
QuadHead2Go and Maevex 7100 Series (Vertical)	М	1.25 in / 3.18 cm
QuadHead2Go and Maevex 7100 Series (Horizontal)	M/M	2 in / 5.08 cm
Maevex 6020 and 6100 series (Horizontal)	M/E	3.15 in / 8.00 cm
Extio N3208 & N3408 (Horizontal)	M/E	3.15 in / 8.00 cm
Avio (Horizontal)	A A/MDG	Device facing forward – 3.49 in / 8.86 cm Device facing backward – 2.15 in / 5.46 cm
ConvertIP (Horizontal)*	M/M	2 in / 5.08 cm

<sup>\*</sup> For the ConvertIP SRST, DSS, and DSH models, you will need to remove the heat plate before installing.

Your device has two (2) mounting holes under its casing. Use two (2) 6 mm M3 flat-head screws (included in the kit) to secure each device. You need to remove the four (4) rubber pads under your device before you can secure your device to the shelf.