
Matrox® Release note – Angled bracket kit

F20277-401-0100

2019.10.17



These release notes contain important information about your Matrox product. These notes are available in English only. We apologize for any inconvenience this may cause.

Mounting your units

This document provides guidelines for mounting your Matrox unit using the angled bracket kit on standard VESA® mounts (75, 100, or 200 mm) or on the back of devices with VESA compliant mounting holes.

Hardware supplied *

An angled bracket kit for a Matrox unit includes:

- 2× angled brackets
- Flat-head screws (6× 6 mm M3)
- Pan-head screws (4× 6 mm M3)

Mounting guidelines

To prevent damage to your Matrox hardware, read the following guidelines before mounting your Matrox hardware:

- Use a hand screwdriver to carefully tighten each screw. Make sure to not overtighten the screws.
- Make sure the cables connected to your unit are properly secured and that no tension is applied to them.
- Make sure the ambient temperature doesn't exceed the maximum recommended temperatures. For more information, see the "Product information" section of your user guide.

Once your unit is mounted, you can connect your system, monitors, and devices to your Matrox unit.

* Angled bracket kits may be sold in multiples.

Mounting your Matrox units on VESA mounts


You can mount your Matrox units on standard VESA mounts (75, 100, or 200 mm) or on the back of devices with VESA compliant mounting holes.

- To mount your Matrox unit on a VESA mount, you need two (2) angled brackets (included in your angled bracket kit).
- Your Matrox unit has two (2) mounting holes on each side. Use four (4) 6 mm M3 screws (included in your kit) to secure each unit to the angled brackets.
- If a Matrox unit is attached to a VESA mount, no other device can use that VESA mount.

Using a 100 x 100 mm or 75 x 75 mm hole pattern

To mount your Matrox unit on a 75 or 100 mm mounting space:

- Attach the brackets to your VESA mount before attaching your brackets to your unit.
- Use two (2) M4 screws (sold separately) inserted through a slot in each bracket to attach your brackets to the mount.
- Use four (4) 6 mm M3 flat-head screws (included in your kit) to attach your brackets to your unit.

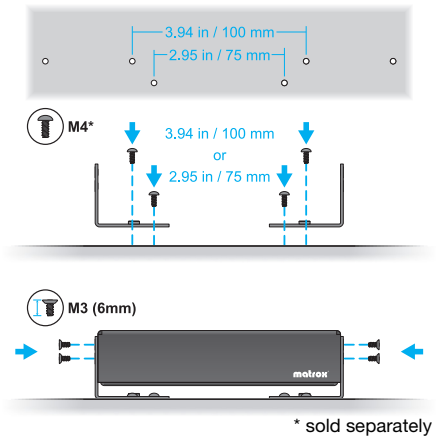

Using a 200 x 100 mm hole pattern

To mount your Matrox unit to a 200 mm (M4) mounting space:

- Attach your brackets to your unit before attaching to your VESA mount.
- Use four (4) 6 mm M3 pan-head screws (included in your kit) to attach your brackets to your unit.
- Use two (2) M4 screws (sold separately) inserted through a slot in each bracket to attach your brackets to the mount.

